

**COACH MODEL :** C2045, T2140, & T2145

**DATE :** 8/10/2015

**SUBJECT :** How To Set Lavatory Flush Air Pressure Regulator



The lavatory air pressure regulator is located in the engine compartment behind the service door.



Lavatory air pressure regulator.



To adjust lavatory air pressure regulator pull out the black knob.



With full air pressure on coach, turn clockwise to increase pressure or counterclockwise to decrease pressure. The pressure setting should be between 11 to 14 psi max. After setting the pressure push knob back to the lock position. Flush the toilet to verify proper operation, re-adjust air pressure if necessary for better operation.